



1. Place tray in position on tank. The lowest point (drain) at the open access end.



5. Fit down-pipe of delivery assembly to adaptor on outlet end of pump. Place pump in position and secure far end of delivery assembly in position with cable tie.



2. Use the blue tool, to make a hole in the tube.




6. Place pots in position on the tray.




3. Screw the black top from the tool. Push the black nipple on the tool and push them into the tube.



7. Fill pots with a chosen growing medium. Push drippers in.

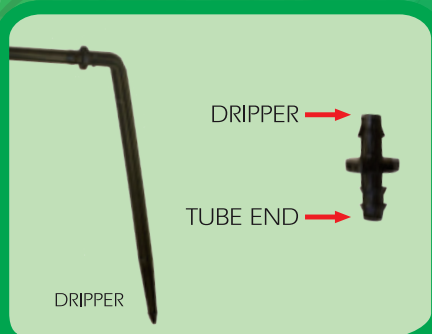

4. Attach complete lead to delivery tube by screwing threaded nipple into tube, and the end of the dripper line. (Dripper could be an arrow or an flood)

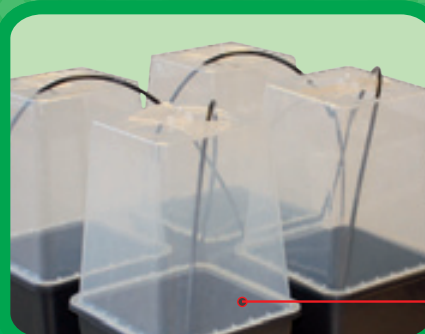

8. Place the propagators on the pots.

*For even better results drill a hole (16mm) in the propagator.